



A blossom of
Verde Valley Rentals, Inc,

740 Airpark Way,
Cottonwood AZ

928-634-8531 x 1
800-293-7368

After Hours Emergency:
Leave a message on
either of the numbers above,
we will respond shortly.

Instructions

Cotton Candy Machine

OPERATING INSTRUCTIONS

- Turn all switches to **off** and plug the power cord into a wall outlet with nothing else plugged into it. Do not use extension cords.
- Fill the center of the machine with one cup or less of floss. Do NOT overfill. Rotate the head back & forth to assure floss is evenly distributed in the head. (If sugar is uneven, machine will vibrate & be noisy).
- Moisten whirl grip (mesh screen) with a damp sponge. This process allows the floss to adhere to the side of the floss bowl.
- Turn motor switch to **on** and turn heat to its highest position.
- When floss starts to flow out of the head, lower the heat setting until the desired consistency of floss is produced. (If you see smoke, turn the heat down until it stops.)

FLOSS MAKING INSTRUCTIONS

- Adjust the leather floaters if needed: up for more lift, down for less.
- Hold the cone (at the pointed end) about an inch or two away from the inside of the bowl.

WARNING: Do not touch center of the machine while operating.

- Work floss away from the center of the machine. You may make several servings (up to 10 at a time) but will have to stop to allow machine to cool a bit to prevent sugar from burning.
- Once you have made the desired amount of servings, you must **turn off the heat switch first**. This step is crucial to prevent sugar from clogging & burning.
- **When cool, turn off the motor switch.**

CLEANING: Please DO NOT attempt to clean this machine.