



A blossom of
Verde Valley Rentals, Inc,

740 Airpark Way,
Cottonwood AZ

928-634-8531 x 1
800-293-7368

After Hours Emergency:
Leave a message on
either of the numbers above,
we will respond shortly.

Instructions

Snow Kone Machine

WARNING: Machine must be properly grounded to prevent shock in case of electrical problems. The motor is 110 volt, single phase, 60 cycle, AC current. Do not use an extension cord.

- Start the motor and fill the gooseneck with ice cubes or block ice broken into about 3+ 4+pieces. The larger the piece of ice, the better the snow. Fill to about 1+from the top.
- Push the pusher handle down to press the ice. Relieve the pressure two or three times on the way down. This rearranges the ice against the cutterhead. A firm even pressure is all that is required, but sometimes you will find it better to permit a better bite against the cutter.
- DO NOT FORCE THE HANDLE or the motor can stall.
- When too much pressure seems necessary, relieve the handle, and come down again. Too much pressure on the pusher handle will make the ice come out coarse; too little pressure makes the ice mushy.

NOTE: During normal operations, the surface temperature of the machine will reach 150° F.

WARNING: Never put your fingers or any object into the shaver body while the motor is running!